

Installation Steps

Step 1: Please check the cargos list

MACHINE PARTS CATALOG

① LOADING PALLETS



② MOTOR RACK



③ TURN ACCESSORIES



④ LEAD COMPONENT



⑥ STRENGTHEN THE CROSSBAR




⑦ TOP SHELF



⑧ MOTOR



Step 2: Install the turning section (note: the wheel direction is facing the outer arc)

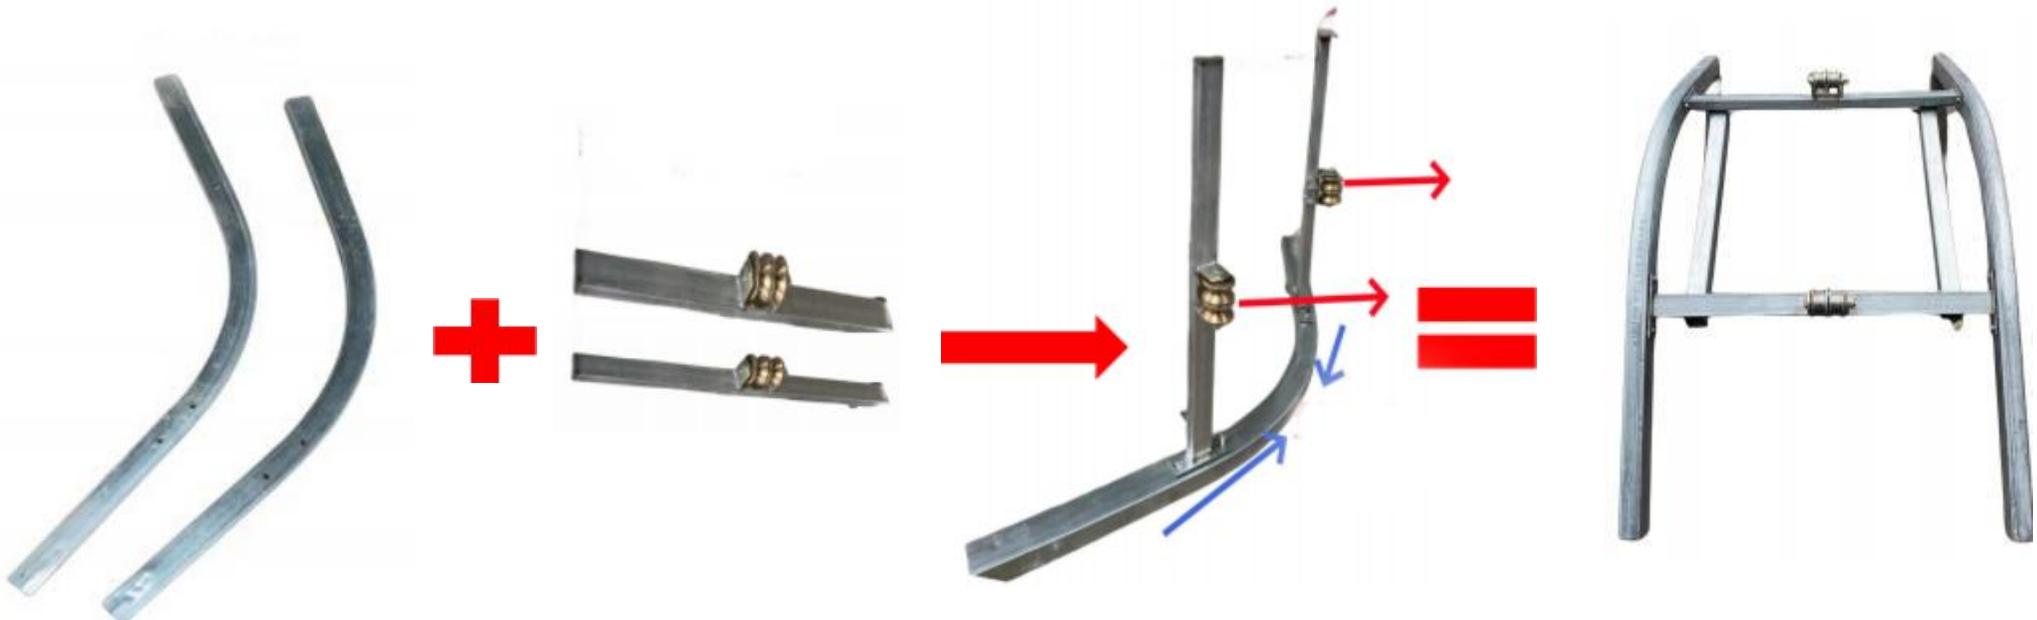


Step 3:




(Note: The motor steel wire rope should be released from the side of the motor frame base with a limit rubber head)

Step 4 :

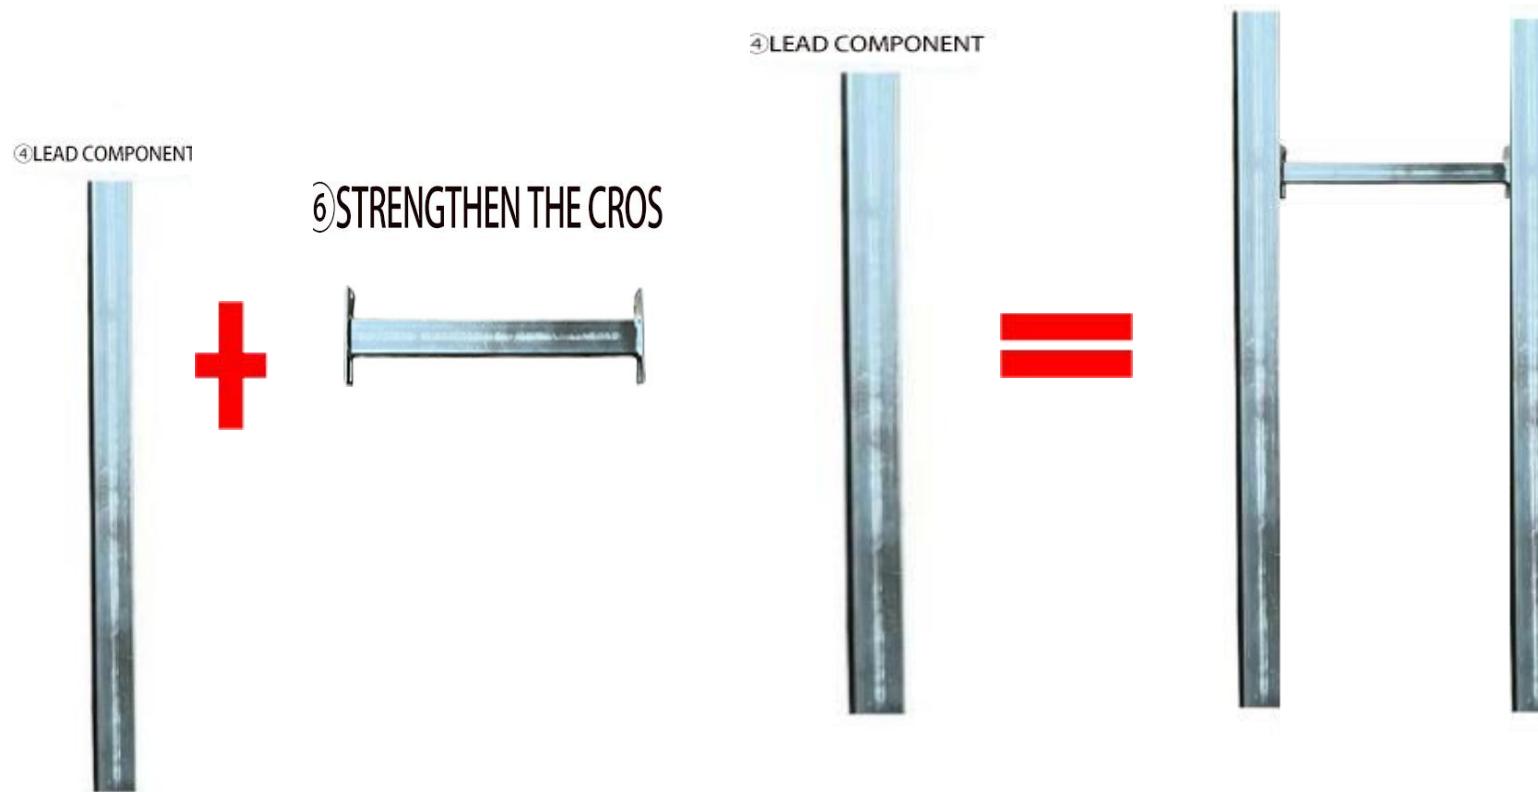

Install the middle pull rod

Step 5:

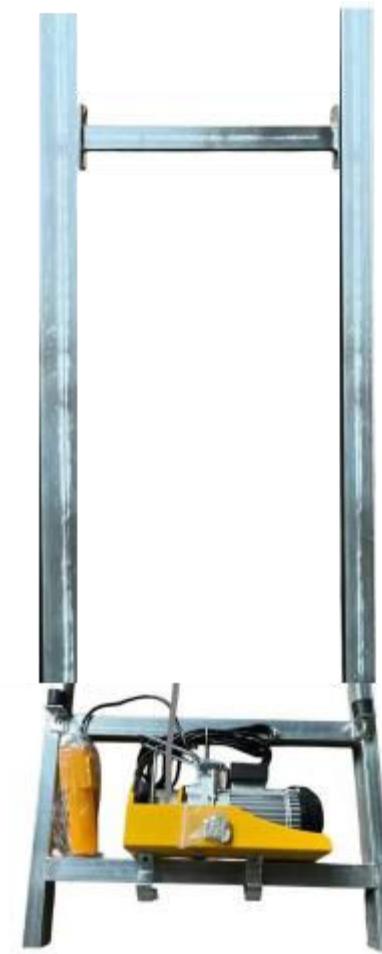

Start splicing note (splice the cross bar section with support snap together with the motor for diagonal bracing)


Step 6 :



Complete the machine assembly as shown in the picture



Step 7:

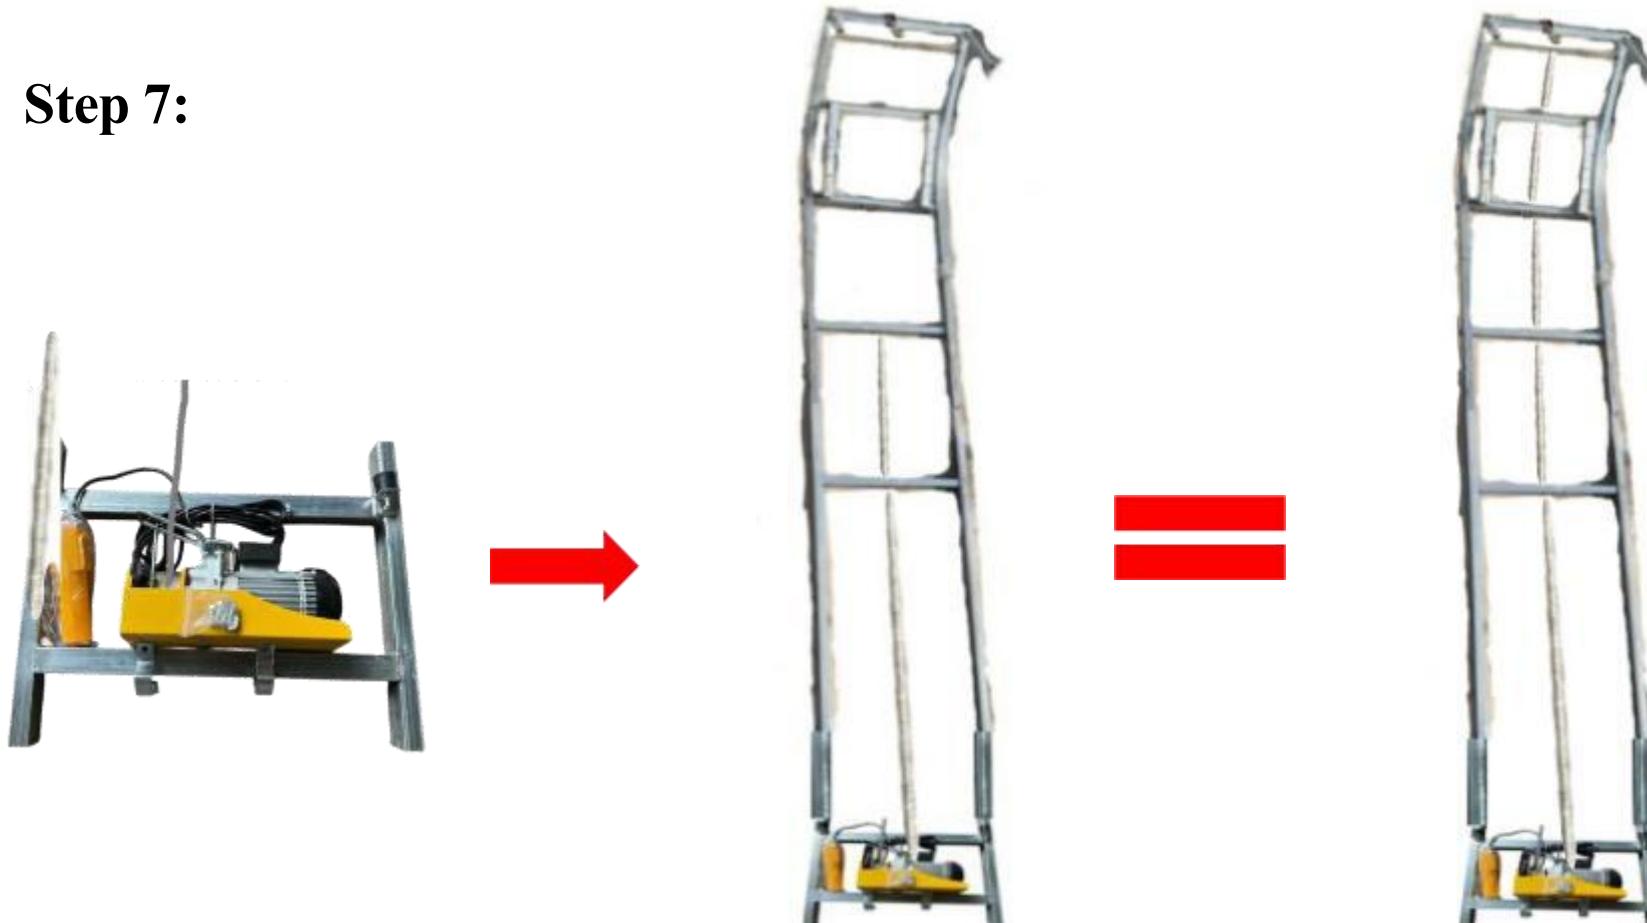

Plug in and pull steel wire rope (note: steel wire rope passes through all horizontal bars)

Step 8:



Tie the rope and pull it up

Flipping over

Adjust the inclination properly


Step 9:

Wire rope in the turning section 



Insert the discharge wire rope and place it at the motor downstairs

Step 10:

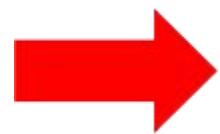

Loading tray



Tighten the screw



Unzip the steel wire rope and tow the cargo onto the trailer.

After completing the above steps, it can be used.

(Note: To avoid affecting the next use, be sure to tighten the steel wire rope when retracting)